



From Tyco Security Products

### To Add Access Codes

- Press **\*** **5** and enter the 4-digit Master Code
- 1 long beep indicates an error, enter the Master Code again
- 3 short beeps indicates acknowledgement, enter a 2 digit user number to be programmed; User Codes 01-48 are available for the PC1616. User Codes 01-72 are available for the PC1832. User Codes 01-95 are available for the PC1864.

- Enter the 4 digits for the code
- Enter another 2 digit number to program another code or press **#** to exit

### To Remove Access Codes

- Press **\*** **5** and enter the 4-digit Master Code
- 1 long beep indicates an error, enter the Master Code again
- 3 short beeps indicate acknowledgement, enter the 2 digit user number to be removed; User Codes 01-48 are available for the PC1616. User Codes 01-72 are available for the PC1832. User Codes 01-95 are available for the PC1864.
- Enter **\*** to remove the code and press **#** to exit
- Once the code has been removed, press **#** to exit

### To enable door chime feature

- Press and hold **⏪** (Door Chime) for 2 seconds
- 3 beeps = ON; 1 long beep = OFF

### Changing keypad buzzer tone

- If using a PK5500 keypad, press **\*** **6** and enter the 4-digit Master Code then proceed with the following:
  - Scroll to the phrase "Buzzer Control" and press **\***
  - If using an LED or fixed-message keypad, press **\*** **6** and enter the 4-digit Master Code then proceed with the following:
    - Press and hold **<** (Left Arrow)
    - The tone will change
    - When the desired tone is identified, release **<** (Left Arrow)

### To sound an alarm manually

- Press and hold **🔥** (Fire) or **⚠️** (Emergency) or **🚒** (Panic) for 2 seconds

### For more information

- Ask your security company for a copy of the operating instructions DVD
- Visit [www.dsc.com](http://www.dsc.com) to download the complete user manual

# STRIKE

## ALARMS & SECURITY

### 250-485-4366

© 2013 Tyco Security Products, 2013-08



From Tyco Security Products

## PowerSeries Security System Quick Reference Guide



### To arm entire system – both interior and perimeter

- Close all windows and doors (the green Ready light will turn ON)
- Press and hold **🏠** (Away) for 2 seconds (the keypad will beep rapidly 5 times and the red Armed light will turn ON)
- Exit premises before the delay time expires

### To disarm system when you return

- When you enter through the door, the keypad will emit a steady warning tone
- Enter your 4-digit Master Code or User Code (the armed light will turn OFF)
- If you make an error, press **#** and enter the 4-digit code again

### To arm perimeter of building and still move freely inside

- Press and hold **🏠** (Stay) for 2 seconds

### To arm system with door or window open

- Press **\*** **1** while disarmed
- The Bypass light will flash
- Enter the 2-digit zone number to be bypassed
- To exit the Bypass function press **#**

### To silence alarm

- Enter your 4-digit Master Code or User Code

### When trouble light comes on

- Press **\*** **2**
- Some keypads will describe the Trouble (full-message keypads); others will only identify the Trouble number (fixed-message and LED keypads)
- If Trouble number 8 is lit, the time and date needs to be reset
- For all other trouble conditions, contact your security provider

### To set time and date

- Press **\*** **6** and enter the 4-digit Master Code
- 1 long beep indicates an error, press **#** and enter the Master Code again
- After 4 short beeps, press **1** then 10 digits, 2 each for the hour, minute, month, day and year (HH:MM MM/DDYY)
- Use a 24-hour clock (e.g. 8:30 pm = 20:30)
- Use 2 digits each to indicate the month and day (e.g. March 8 = 03 08)

[www.dsc.com](http://www.dsc.com) | 1-888-888-7838