

STRIKE

ALARMS & SECURITY

250-485-4366

DSC

Security System
Quick Reference Guide

Set "AWAY" Mode

Arm your entire system, both interior and perimeter

- Close all windows and doors (green check-mark is lit)
- Press/hold "away" or the symbol with an empty house until you hear a beep.
- Or you can use your code, the system will know you are exiting. If you do not exit a door, the system will automatically arm in "stay mode".
- Exit the premise before the delay sound expires.

Set "STAY" Mode

Arm your perimeter so you can move freely in inside.

- Press and hold "Stay" or the symbol with a man in the house. You will hear the exit delay tone, and then it will arm (you do not need to exit, the delay sound is just to let you know its arming).

To "Disarm" your system or "Silence" the Alarm

- When you enter through the door, the keypad will emit a steady warning tone.
- Enter your 4-digit user code (the armed light will turn off)
- If you make a mistake, press # and re-enter your code

To "Bypass" an open door or window

- Press * 1 when system is disarmed.
- The bypass light will flash
- Scroll with arrows < > or enter the 2 digit zone you wish to bypass then press #

Trouble Light or Yellow Triangle.

Press *2

- If a "4" shows up it could mean FTC (failure to communicate). This means your phone line is/was down. It can take up to one week to clear for residential, or 24hrs for commercial; given that your phone line is operating. If your phone line is down, contact your phone provider.
- If a "8" shows up, reset date and time.
- For all other trouble conditions, contact us, 250-485-4366

Set Date and Time

- Press * 6 then enter the 4 digit Master Code
- You should hear 4 short beeps, then press 1 then HH:MM, MM/DD/YY (total of 10 digits) use the 24hr clock (8:30pm is 20:30, March 8th,2021 is 03/08/21)

Add Access Codes

- Press * 5 then enter the 4 digit Master Code
- You should hear 3 short beeps, then enter the 2 digit user number you want programmed.
- Enter the new 4 digit code then press # (If you are programming multiple codes, enter another 2 digit user number then the 4 digit code. Then press # to exit.).
- Always test codes by arming and disarming the system.
- Users 1-48 are available for PC1616, 01-72 are available for PC1832 and 01-95 are available for PC1864. If you are unsure, contact us 250-485-4366

Remove Access Codes

- Press * 5 then enter the 4 digit Master Code
- You should hear 3 short beeps, enter the 2 digit user to be removed.
- Press * to remove the code then press # to exit.

Change keypad buzzer tone

- press * 6, then 4 digit master code. Scroll to find "Buzzer Control" and press *, hold down the left arrow button to change tone. Release when desired tone is heard.

Enable Door Chime

- Press and hold the chime symbol for 2 seconds
- 3 beeps = on, 1 long beep = off

For more information, call 250-485-4366 or visit our website www.strikealarms.ca